 


WALL CABINET

SINGLE DOOR

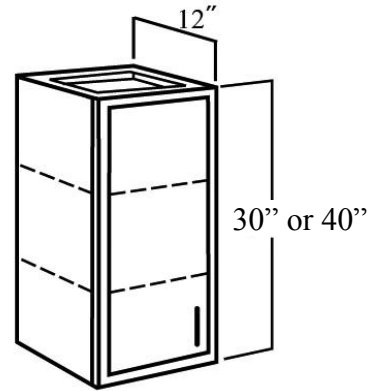

W930 / W940	(Width 9")
W1230 / W1240	(Width 12")
W1530 / W1540	(Width 15")
W1830 / W1840	(Width 18")
W2130 / W2140	(Width 21")



- 2 or 3 hinges per door
- 2 or 3 adjustable shelves
- The wood doors might be changed for glass doors


1 door

WALL CABINET

DOUBLE DOORS



W2430 / W2440	(Width 24")
W2730 / W2740	(Width 27")
W3030 / W3040	(Width 30")
W3330 / W3340	(Width 33")
W3630 / W3640	(Width 36")

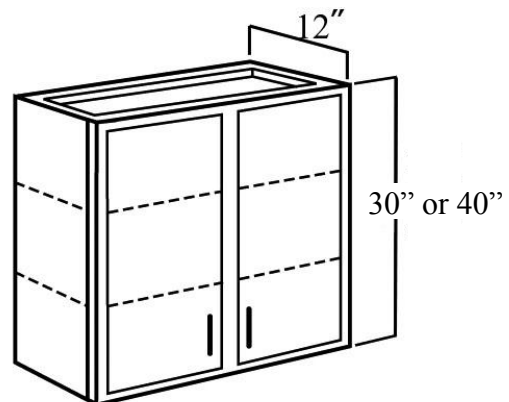 

- 3 hinges per door
- 2 or 3 adjustable shelves
- The wood doors might be changed for glass doors

 
2 doors

WALL CABINET *DIAGONAL CORNER*



WDC2430 (Width 24")

WDC2440 (Width 24")

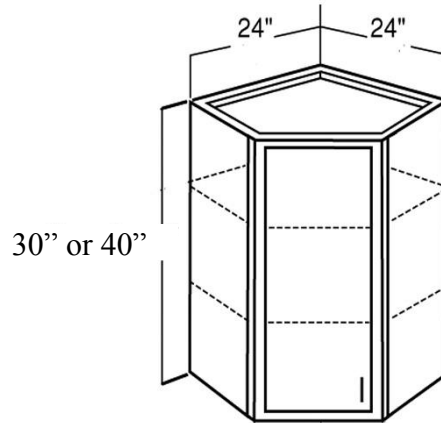

- 2 or 3 hinges per door
- 2 or 3 adjustable shelves
- The wood doors might be changed for glass doors

 
1 door

WALL CABINET *MICROWAVE CABINET*



MWC2430 / MWC2440 (Width 24")

MWC2730 / MWC2740 (Width 27")

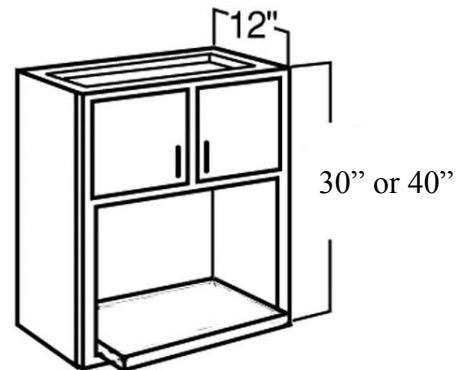

- 2 hinges per door
- No shelf inside doors
- 15" deep shelf for microwave

 
2 doors

WALL CABINET

FRIDGE CABINET



- 15" High: W301524 (Width 30")
- W331524 (Width 33")
- W361524 (Width 36")
- 21" High: W302124 (Width 30")
- W332124 (Width 33")
- W362124 (Width 36")
- 24" High: W302424 (Width 30")
- W332424 (Width 33")
- W362424 (Width 36")

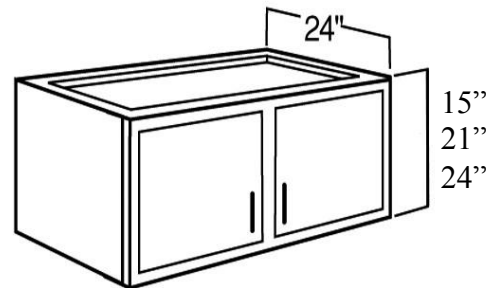

- 2 hinges per door
- No shelf

 
2 doors

WALL CABINET

12" - 24" HIGH CABINET



- 12" High: W2412 (Width 24")
- W3012 (Width 30")
- W3312 (Width 33")
- W3612 (Width 36")
- 15" High: W3015 (Width 30")
- W3315 (Width 33")
- W3615 (Width 36")
- 18" High: W3018 (Width 30")
- W3318 (Width 33")
- W3618 (Width 36")
- 21" High: W3021 (Width 30")
- 24" High: W3024 (Width 30")

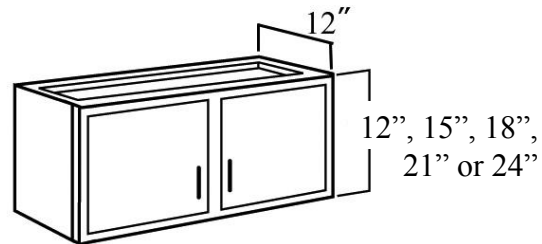


- 2 hinges per door
- No shelf

2 doors

WALL CABINET
WINE RACK



 WR3015/WR3018 (Width 30")

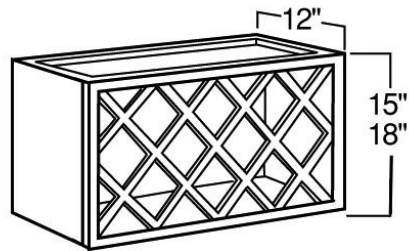


- It can be installed horizontally or vertically

WALL CABINET
CORNER OPEN SHELF



WEOS630 / WEOS640 (Width 6")

 WEOS930 / WEOS940 (Width 9")

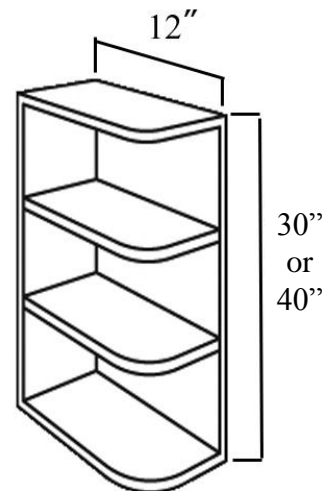

2 or 3 shelves